

2

FIXING A200/AF200 TRIM

SEE NUMBER 2
ON THE CURE IT
BUILD-UP DIAGRAM

The A200/AF200 trim is installed where the roof meets a gutter.

Once the decking has been fitted, edge trims should be installed around the perimeter and at any significant change in pitch.


Consider planing the deck by 2mm to allow the trim to sit flush and prevent standing water behind the trim.

Cure It GRP laminate

Bandage

Roofing tack

Gutter brackets should be fitted at this stage.

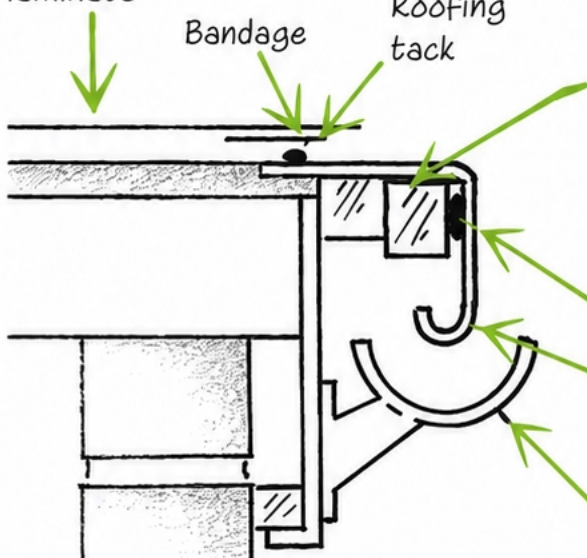


Fix 2 25x50mm battens around the perimeter for the A200 (1 batten for AF200) using a nail gun. Offset the second batten 10mm lower than the first to allow the trim to sit flush on the edge of the roof.


Trim adhesive

Drip trim installed wherever the roof meets a gutter.

Gutter brackets should be installed before the A200.

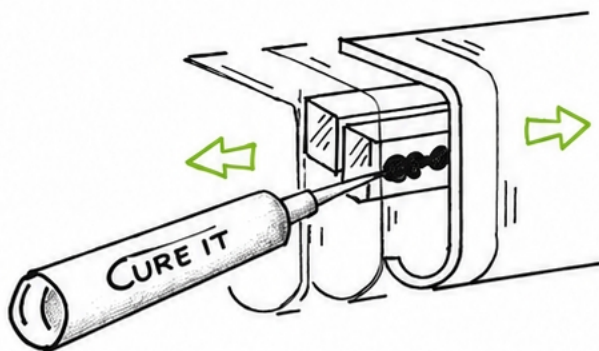

Apply a continuous strip of Cure It Trim adhesive along the batten. Rub the trim into place and use roofing tacks / staple gun to fit the trim to the deck at 150mm centres taking care to ensure the trim sits flat on the deck.

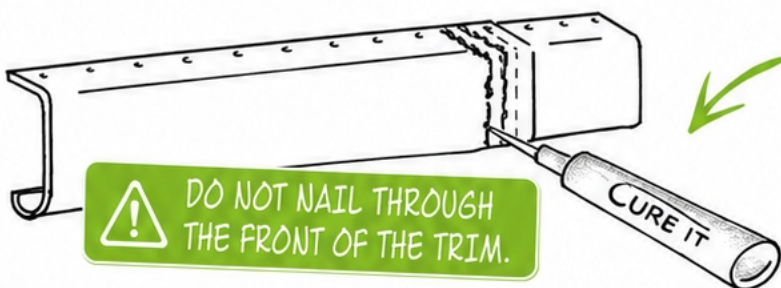

DO NOT NAIL THROUGH THE FRONT OF THE TRIM.

Trims can be joined by applying a strip of trim adhesive to the inside of the overlapping trim. Allow a 50mm overlap.